

Assembly Instructions

Monarch Luxury Dog Cabin No. 5

Dear customer,

We wish you a lot of enjoyment with your newly ordered product. In the rare case that you are not fully satisfied, please contact us

Phone: 0870 607 34 74
email: enquiries@ideas-4-pets.com
www.ideas-4-pets.com


If you are still experiencing problems you can always contact our **technical helpline** on 07912 270 451 to be helped along.

A note on wooden dog housing

Wood is a natural living product and as such there will be surface irregularities and even knots. Wood will expand and contract according to the weather and our structures are designed to be flexible enough to allow this natural process. In particular the floors on our dog cabins are designed to allow ventilation, and there will be gaps in the corners for this purpose.

You will need the following tools

- screwdriver / powerdrill
 - hammer
- delivered with the dog cabin:
- 10 x gold electroplated nails (1 reserve) (1)
 - 8 x silver nails – 2,4 x 40 (2)
 - screws:
 - 3 x 3,5 x 40 (3)
 - 12; 4,5 x 60 (4)

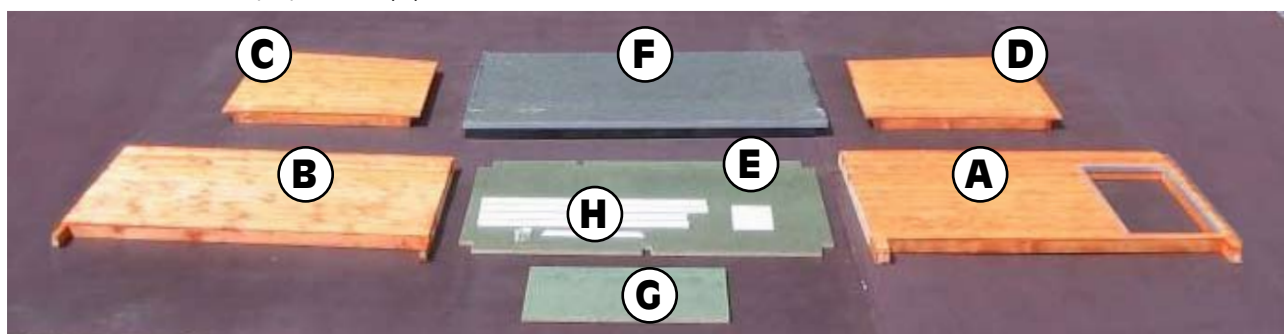

1. Screw one of the side panels C or D to the front panel A using screw (4). The side panel has to be attached to the front panel from behind and the screws will need to be screwed from the inside through the frame of the side panel into the front panel. You will need to do this at the top and bottom



2. Then attach the other side panel C or D the same way to the front panel (A).



3. Slip in the green chipboard floor (E) so it lies on the ladders on the side with the green side up. You can nail it later in if required.




- 4.** Attach the back panel (B) to the side panels (making up the 4-sided dog cabin house with the floor inside) by screwing the screws (4) from the inside through the frame of the side panels into the back panel.



- 5.** With the cabin now on its side, attach the two floor support beams, which should be screwed from the outside with screw no () between the front and back panels. Please note these two floor support beams are identical and have straight cuts at the ends.



- 6.** With the cabin in upright position, attache the roof support beam (this has angled ends) between the front and back panels.

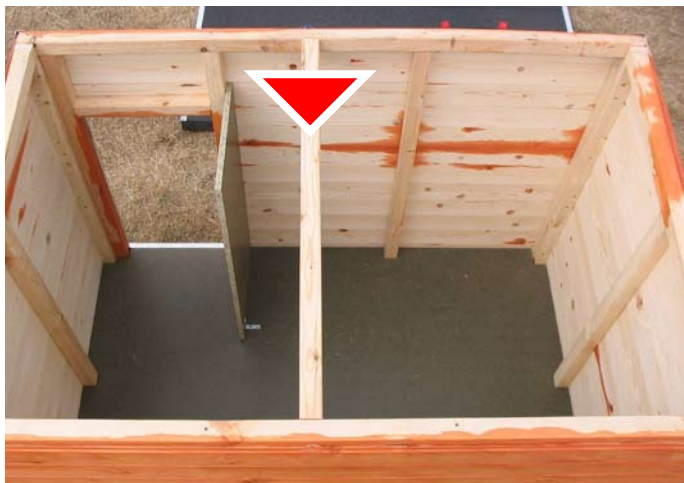

- 7.** Attach the green chipboard draught screen using 3 x screws (3) to the frame at the entrance. Then attach the free end of the screen to the floor using the support bracket supplied.



- 8.** Attach the 4 aluminium strips to the side corners of the dog cabin with nails (1) (Check that the shorter aluminium strips are attached to the back of the dog cabin and the longer ones to the front)



- 9.** Attach the aluminium door step using nails (1)



- 10.** Close the dog cabin with the lid so that the aluminium-stripped side faces the front (this enables the water to drain at the back)



Note:

the production process for some models results in excess tongue over the frame on the front panel. This can be easily moved if required.